

Articles in this section

[\(Navimow X4\) How to maintain and care for lawnmower blades to prevent rust?](#)

[\(Navimow X4\) How often should I replace the blades or other components?](#)

[\(Navimow X4\) How to clean Navimow X4?](#)

[\(Navimow X4\) How to replace the blades?](#)

[\(Navimow X4\) Spring restorage guide](#)

[\(Navimow X4\) Winter Storage Guide](#)

(Navimow X4) Winter Storage Guide

8 months ago · Updated

[Follow](#)

To ensure your mower works perfectly in the spring, follow the instructions below to store Navimow before winter.

1. Prepare Your Tools

- A screwdriver (Do NOT use an electric screwdriver)
- A brush for cleaning the mower
- Protective gloves for removing the blades
- 4 silicone pegs (Take them out from the mower's box)

2. Hibernate Your Mower

To save energy and preserve the battery, hibernate the mower before winter storage.

Step 1: Charge the mower to at least 85% battery.

Step 2: Tap 'Begin hibernating' to power off. Hibernation uses less energy than a standard shutdown.

Note: To wake the mower from hibernation, charge it before powering on.

3. Store your charging station and mark its location

Use the silicone pegs to mark the location of the charging station, so that you can find where it was previously installed in the next mowing season.

Step 1: Unplug the charging station.

Step 2: Unscrew the 4 screws on the charging station.

Step 3: Mark the charging station with the 4 silicone pegs and leave them in the ground.

Step 4: Disconnect the charging station and antenna cable.

4. Uninstall the Antenna

If the antenna is installed on a wall or roof, use a plastic bag or a cover to cover up the antenna. If the antenna is installed from the ground, remove the screw to detach the antenna head and the pole. Keep the bottom part in its place.

Note: Changing the location of the antenna requires creating a new map.

5. Remove the Blades and Clean the Mower

Step 1: Put on protective gloves and carefully remove the blades.

Step 2: Turn the mower upside down and clean it with a brush.

Step 3: Use a water hose to wash away dirt, then allow the mower to dry completely.

6. Pack and Store

Pack the mower, charging station, antenna, and all cables into the box. Store the box in a dry, frost-proof indoor place where the temperature is between 5°C (41°F) and 45°C (113°F).

To watch the tutorial video, go to <https://www.youtube.com/watch?list=PLJH-f4yCamF5aEbTgw6TP9rfsNwVh1RN&v=6u0uEan4Oio&feature=youtu.be>